

VICTREX LMPAEK™ UDT AS7-192-34



Product Description

Unidirectional (UD) composite prepreg tape with high performance semi-crystalline thermoplastic polymer.

- Base polymer: VICTREX low melt PolyArylEtherKetone, LMPAEK™ Polymer.
- Continuous carbon fibre reinforcement: Hexcel HexTow® AS7 12K.

Typical Application Areas

- Aerospace – Primary & Secondary structures
- Aircraft interiors including high load applications
- Aerospace – Brackets, Ribs, Stiffeners
- Aerospace – Engine Applications
- e-Mobility / Advanced Air Mobility
- Battery Systems

Key Characteristics

- Excellent toughness and fatigue performance
- Exceptional resistance to aggressive chemicals & solvents
- Lower viscosity than PEEK at processing temperatures
- Can operate at or above glass transition temperature
- LMPAEK™ materials are suitable for overmoulding with PEEK resin
- Low coefficient of thermal expansion
- Low moisture absorption
- FST performance meets recognized industry standards
- Room temperature storage, no freezer required
- Suitable for welding and thermoplastic joining applications
- Available in widths for ATL and AFP lay-up, long lengths without splices (> 1000 m)

NEAT POLYMER PROPERTIES		
	TEST METHOD	TYPICAL VALUE
Property		
Melting Point	ISO11357	305°C (581°F)
Glass Transition (T _g) Onset	ISO11357	149°C (300°F)
Melt Viscosity@ 400 °C	ISO11443	150 Pa.s
Crystallinity	ISO11357-2	25 ± 5%
Density	ISO1183	1.30g/cm ³ (81.2 lb/ft ³)

PREPREG PHYSICAL PROPERTIES	
	NOMINAL VALUE
Property	
Fibre Areal Weight (FAW)	192gsm (5.66 oz/yd ²)
Resin Content by Weight (RC)	34%
Prepreg Areal Weight (PPAW)	291gsm (8.58 oz/yd ²)
Consolidated Ply Thickness (CPT)	0.183mm (0.0072 in)
Fibre Volume Fraction	58.50%
Density	1.587g/cm ³ (99.07 lb/ft ³)

MECHANICAL PROPERTIES				
	CONDITIONS	TEST METHOD	TYPICAL VALUES	
Property				
Tensile Strength 0°	RTA	ASTM D3039	2523 MPa	366 ksi
Tensile Modulus 0°	RTA	ASTM D3039	141 GPa	20.5 Msi
Compression Strength 0°	RTA	ASTM D6641	1496 MPa	217.1 ksi
Compression Modulus 0°	RTA	ASTM D6641	130 GPa	18.9 Msi
Compression Strength 90°	RTA	ASTM D6641	204 MPa	29.6 ksi
Compression Modulus 90°	RTA	ASTM D6641	9.6 GPa	1.4 Msi
In-Plane Shear Strength ^{s0.2%}	RTA	ASTM D3518	39.9 MPa	5.8 ksi
In-Plane Shear Modulus	RTA	ASTM D3518	3.93 GPa	0.57 Msi
Open-Hole Compression Strength	RTA	ASTM D6484	314 MPa	45.6 ksi
Open-Hole Compression Strength	ETW	ASTM D6484	236 MPa	34.3 ksi
Open-Hole Tensile Strength	RTA	ASTM D5766	424 MPa	61.5 ksi
Flexural Strength 0°	RTA	ASTM D790	1375 MPa	199.5 ksi
Flexural Strength 90°	RTA	ASTM D790	128 MPa	18.6 ksi
Compression After Impact Strength 6.67 J/mm (1500 in-lb/in) Impact Energy	RTA	ASTM D7137	286 MPa	41.6 ksi

Panels were consolidated using Vacuum Bag Only (VBO)

Room Temperature Ambient (RTA)

Elevated Temperature Wet (ETW) is 121°C (250°F) after equilibrium at 71°C/85%RH (160°F/85%RH)

Fibre dominated properties normalised to the nominal Consolidated Ply Thickness (CPT)



This product grade is approved by the United States National Centre for Advanced Materials Performance (NCAMP) for use in aerospace programs. Detailed data available on our website www.victrex.com or upon request

TYPICAL PROCESSING	
Drying (if required)	
Drying Temperature / Time	150°C / 3h or 120°C / 5h (residual moisture <0.02%)
Consolidation	

VICTREX LMPAEK™ UDT can be consolidated in a press, autoclave, or in an oven under a polyimide vacuum bag (VBO – Vacuum Bag Only, out of autoclave consolidation) requiring as little as 1 bar pressure to consolidate the stacked prepreg tapes. Tapes can be hand-laid or by automated processes such as automated fibre placement (AFP) or automated tape laying (ATL).

Processing conditions for VICTREX LMPAEK™ UDT need to be set to ensure that the LMPAEK™ polymer matrix is melted and fully fused. Typical consolidation temperatures are in the range 349-399°C (660-750°F) with a minimum applied pressure of 1-10 bar (15-150 psi). For a static press, a typical minimum dwell within the melt

range given above is 20 minutes, but thicker laminates may need additional time. Press cooling rate of 5-25 °C/min may be used to attain proper crystallinity levels (typically 25%±5%). Parts may be removed from tooling below 200 °C (392 °F).

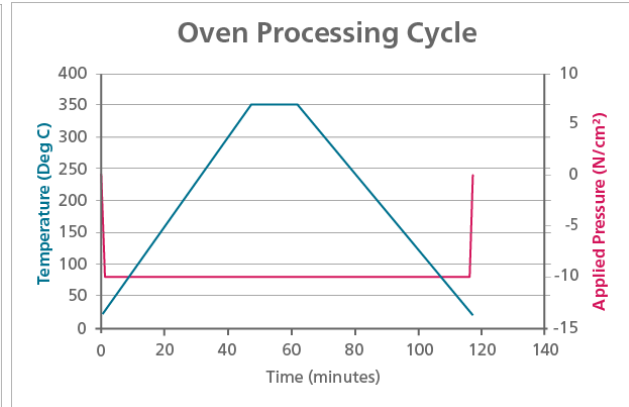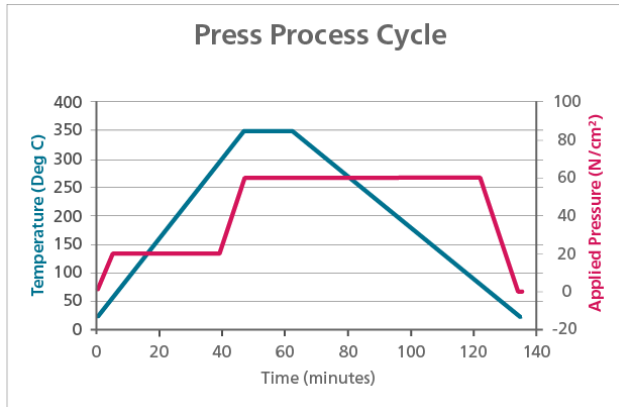

Important notes:

1. Processing conditions quoted in our datasheets are typical of those used in our processing laboratories.
2. Data is generated in accordance with prevailing national, international, and internal standards, and should be used for material comparison. Actual property values are highly dependent on part geometry, mould configuration and processing conditions.

Detailed data available on our website www.victrex.com or upon request.

World Headquarters

Victrex plc
Hillhouse International
Thornton Cleveleys, Lancashire
FY5 4QD, United Kingdom
TEL +44 (0)1253 897700
FAX +44 (0)1253 897701
MAIL victrexplc@victrex.com



This information is provided "as is". It is not intended to amount to advice. Use of the product is at the customer's/user's risk. It is the customer's/user's responsibility to thoroughly test the product in each specific application to determine its performance, efficacy and safety for each end-use product, device or other application and compliance with applicable laws, regulations and standards. Mention of a product is no guarantee of availability. Victrex reserves the right to modify products, data sheets, specifications and packaging. **Victrex makes no warranties, express or implied (including, without limitation, any warranty of fitness for a particular purpose or of intellectual property non-infringement) and will not be liable for any loss or damage of any nature (however arising) in connection with customer's/user's use or reliance on this information, except for any liability which cannot be excluded or limited by law.** This document may be modified or retracted at any time without notice to the customer/user.

Victrex Manufacturing Limited (or another member of the Victrex group) is the owner or the licensee of all intellectual property rights in and to this document including the following trade marks, VICTREX, INVIBIO, JUVORA, APTIV, 450G, PEEK-OPTIMA, SHAPING FUTURE PERFORMANCE, LMPAEK, TRIANGLE (Device). All rights are protected by intellectual property rights including copyright under relevant national and international intellectual property laws and treaties. All rights reserved. Copyright © Victrex Manufacturing Limited 2022.